

BR06


Device setting

Register Mode.

Recognition Mode.

Setup 1. License

Agree the license statement.

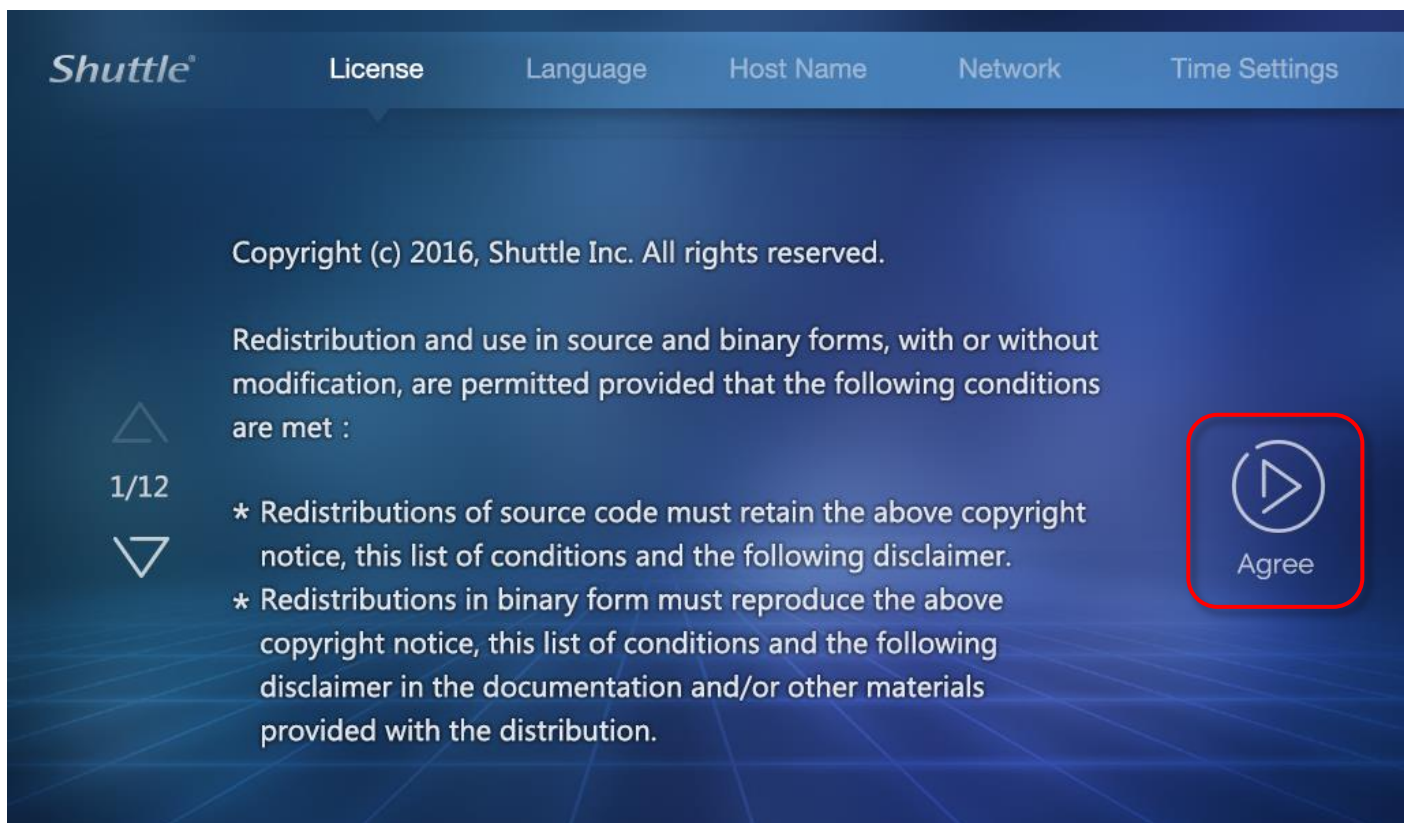


Setup 2. Language

Select a Language and tap Next.




Type the device host name of the BR06, and then press Save and Next button.

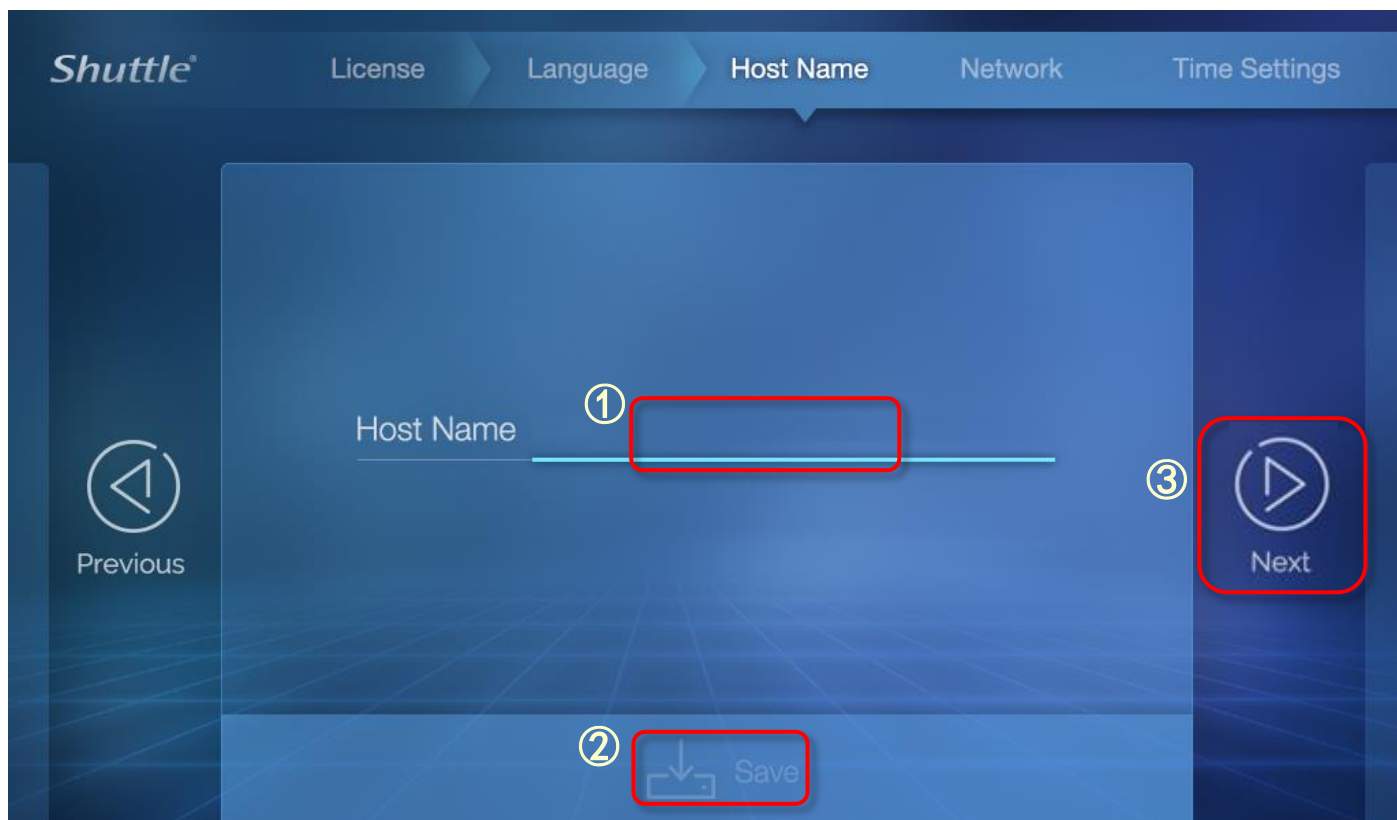

Setup 4. Network

Select Network mode, DHCP or Fix IP and press Save and Next button.

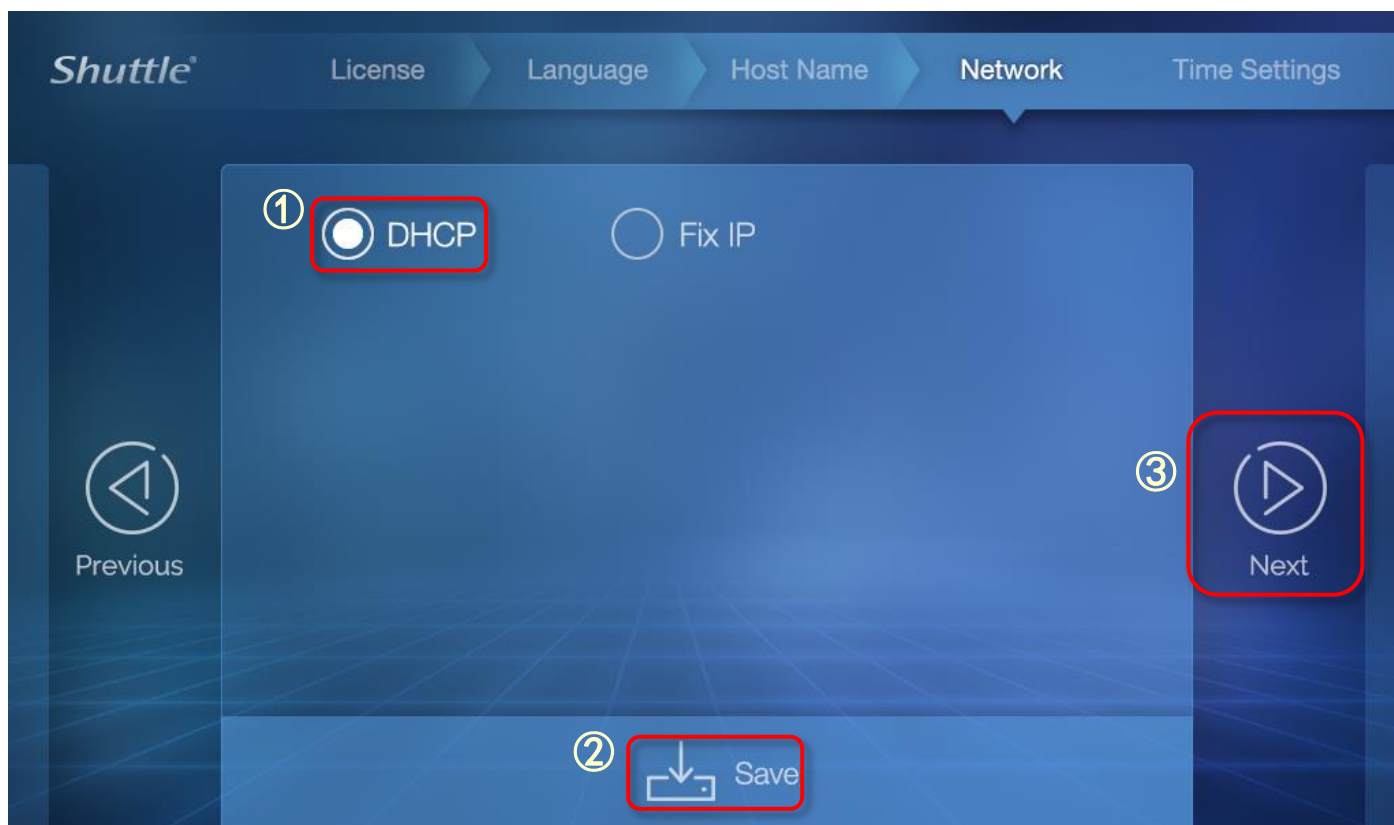

* If you select the Fix IP, Please Input below items and press Save and Next button.




The screenshot shows the 'Network' configuration page in the Shuttle web interface. At the top, a navigation bar includes 'License', 'Language', 'Host Name', 'Network' (active), and 'Time Settings'. The main content area has two radio buttons: 'DHCP' and 'Fix IP'. The 'Fix IP' option is selected and circled with a red box and a circled '1'. Below these are four input fields: 'IP' (252.252.525.102), 'Mask' (252.252.525.102), 'Gateway' (101.45.230.52), and 'DNS' (252.252.525.102). A red bracket groups these four fields with a circled '2'. On the left is a 'Previous' button with a left arrow. On the right is a 'Next' button with a right arrow, circled with a red box and a circled '4'. At the bottom center is a 'Save' button with a download icon, circled with a red box and a circled '3'.

Setup 5. Time Settings

Set the time zone and time and press Save and Next button.

* If you select NTP sever, pleas input the IP, device can get a new time.

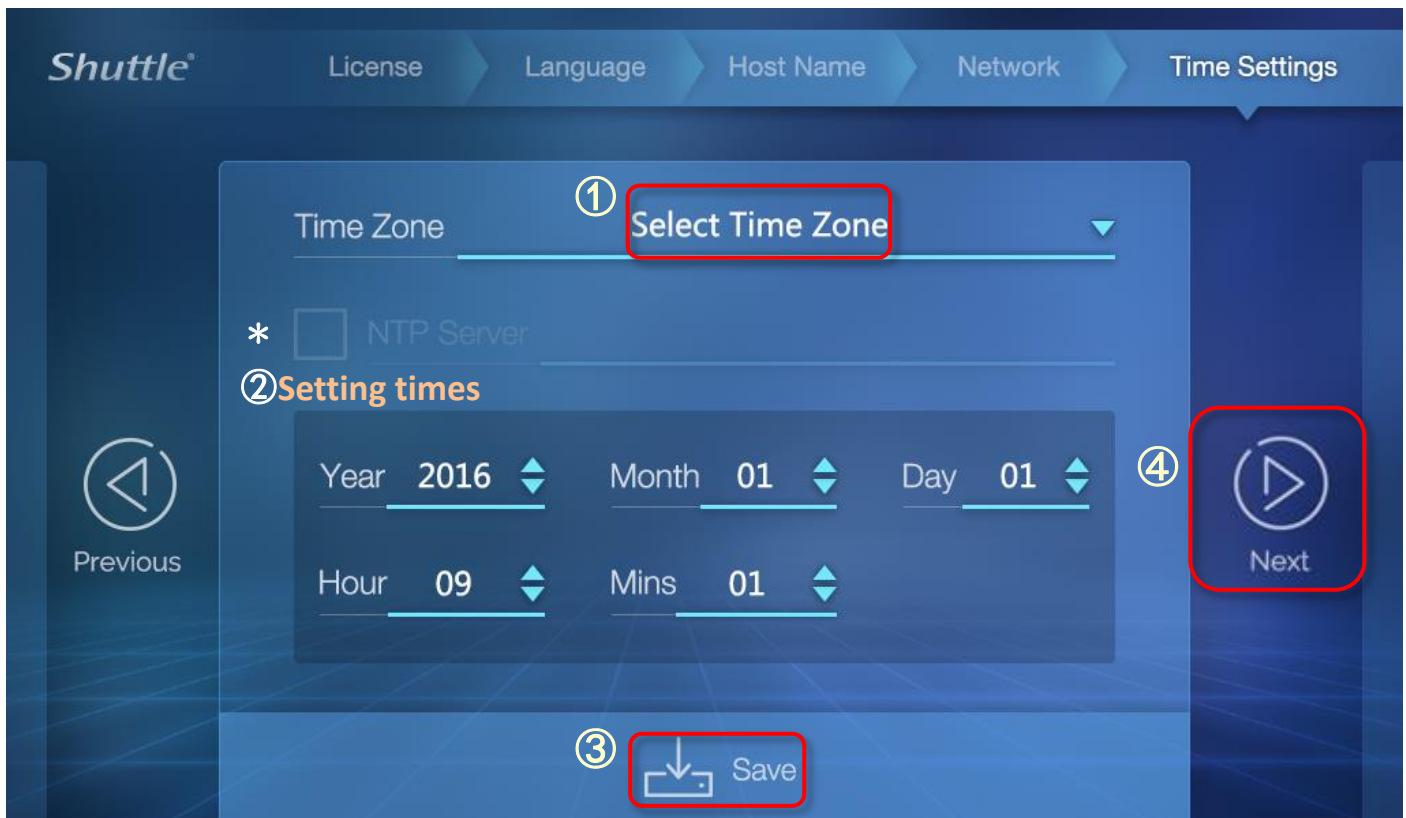

The screenshot shows the 'Time Settings' page in the Shuttle web interface. The navigation bar at the top includes 'License', 'Language', 'Host Name', 'Network', and 'Time Settings' (active). The main content area starts with a 'Time Zone' dropdown menu, circled with a red box and a circled '1', with the text 'Select Time Zone' inside. Below this is an 'NTP Server' checkbox, which is unchecked. A section titled 'Setting times' (circled with a red box and a circled '2') contains two rows of time selection fields: 'Year 2016', 'Month 01', 'Day 01' in the first row, and 'Hour 09', 'Mins 01' in the second row. All these fields have up/down arrows. To the right of this section is a 'Next' button with a right arrow, circled with a red box and a circled '4'. At the bottom center is a 'Save' button with a download icon, circled with a red box and a circled '3'. On the left is a 'Previous' button with a left arrow.

Setup 6. Select Register or Recognition Mode

* For the Register mode.


Set the sever IP and press confirm button.

“Need Accept Device” message will be shown in ①

Then check “Device list” in server web page. Please see the NOTE❗.



BR06 system will **auto reboot** to Register mode.

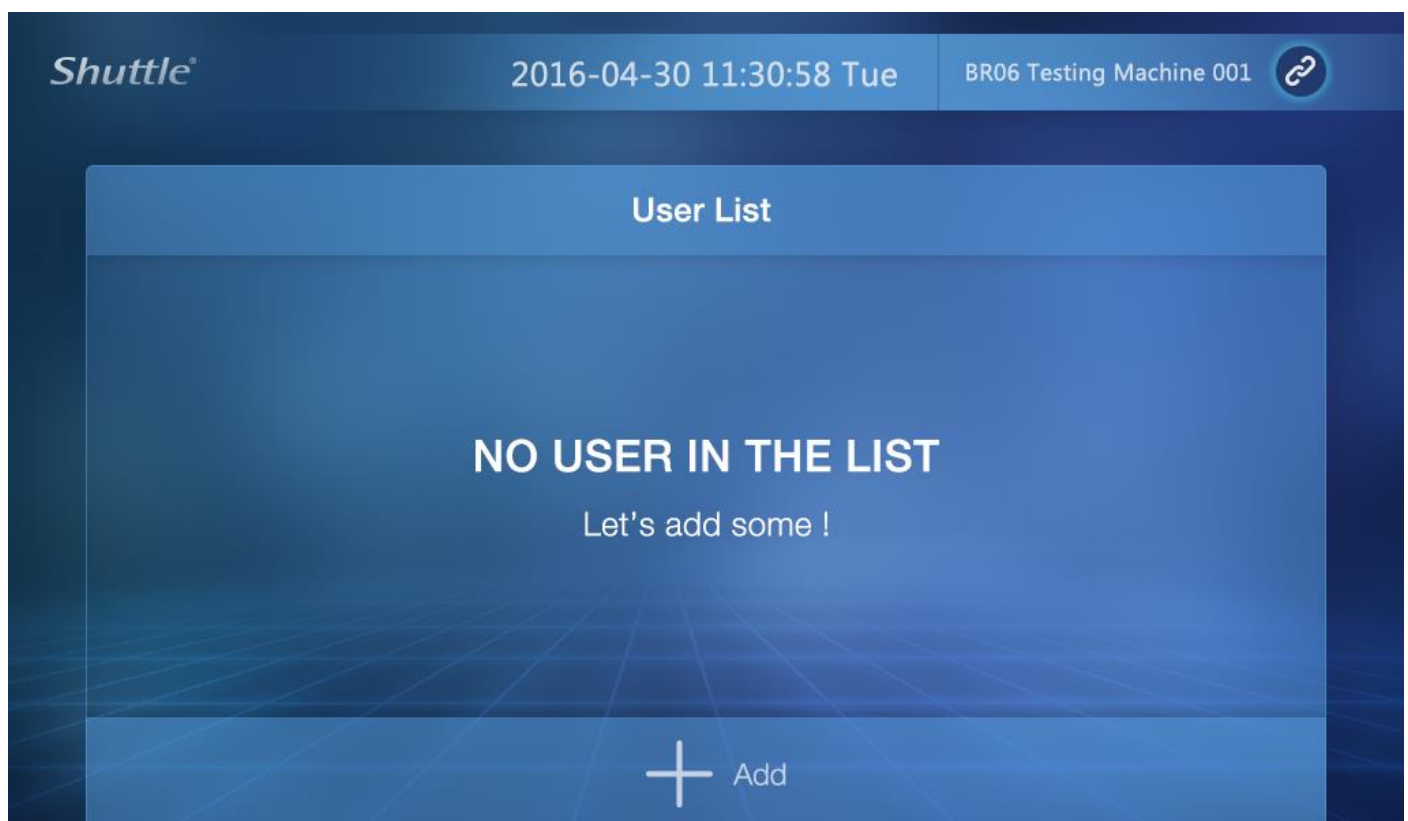


* For the Recognition mode, select face or multi-recognition.


Set the sever IP and press confirm button

“Need Accept Device” message will be shown in ②

Then check “Device list” in server web page. Please see the NOTE❗.

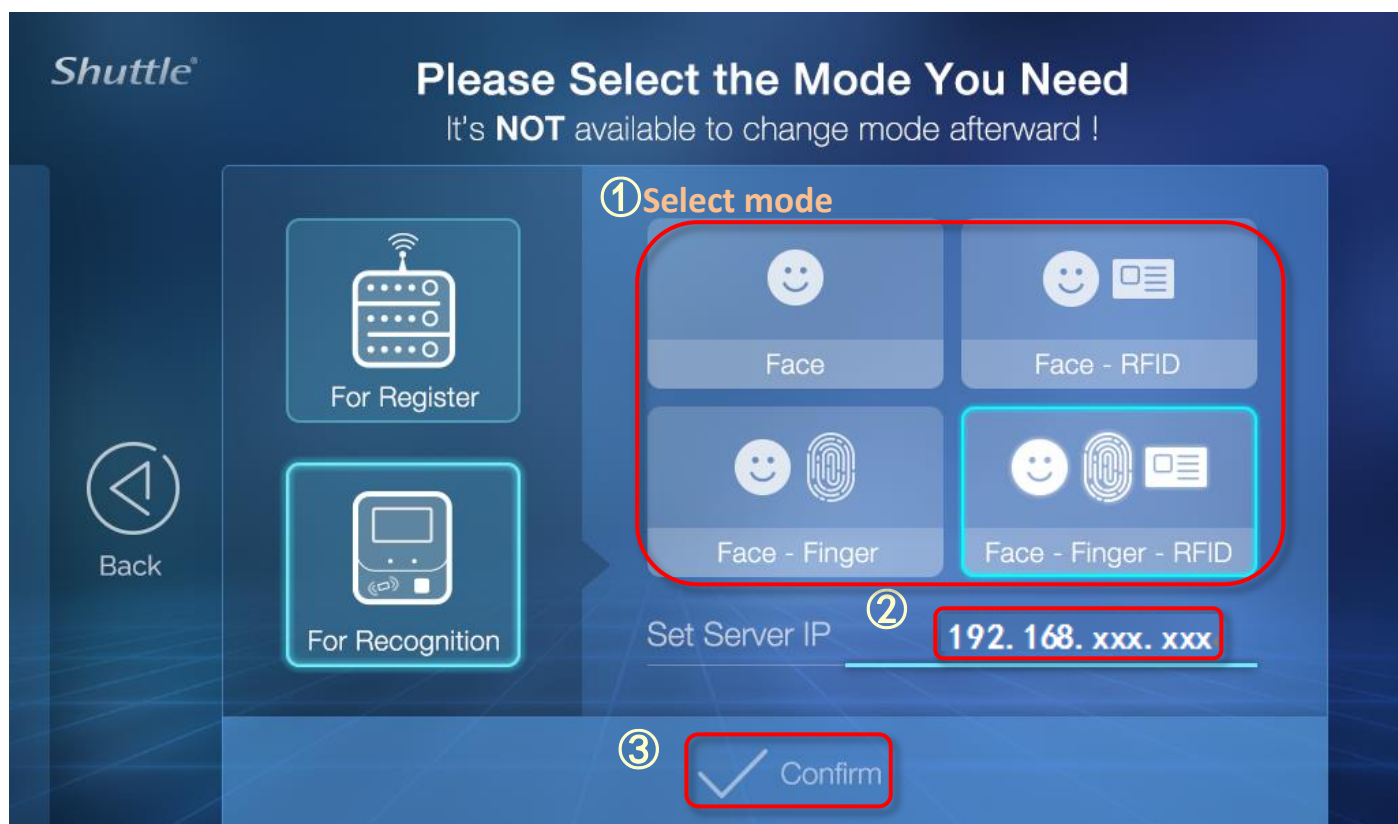

BR06 system will **auto reboot** to your select recognition mode.

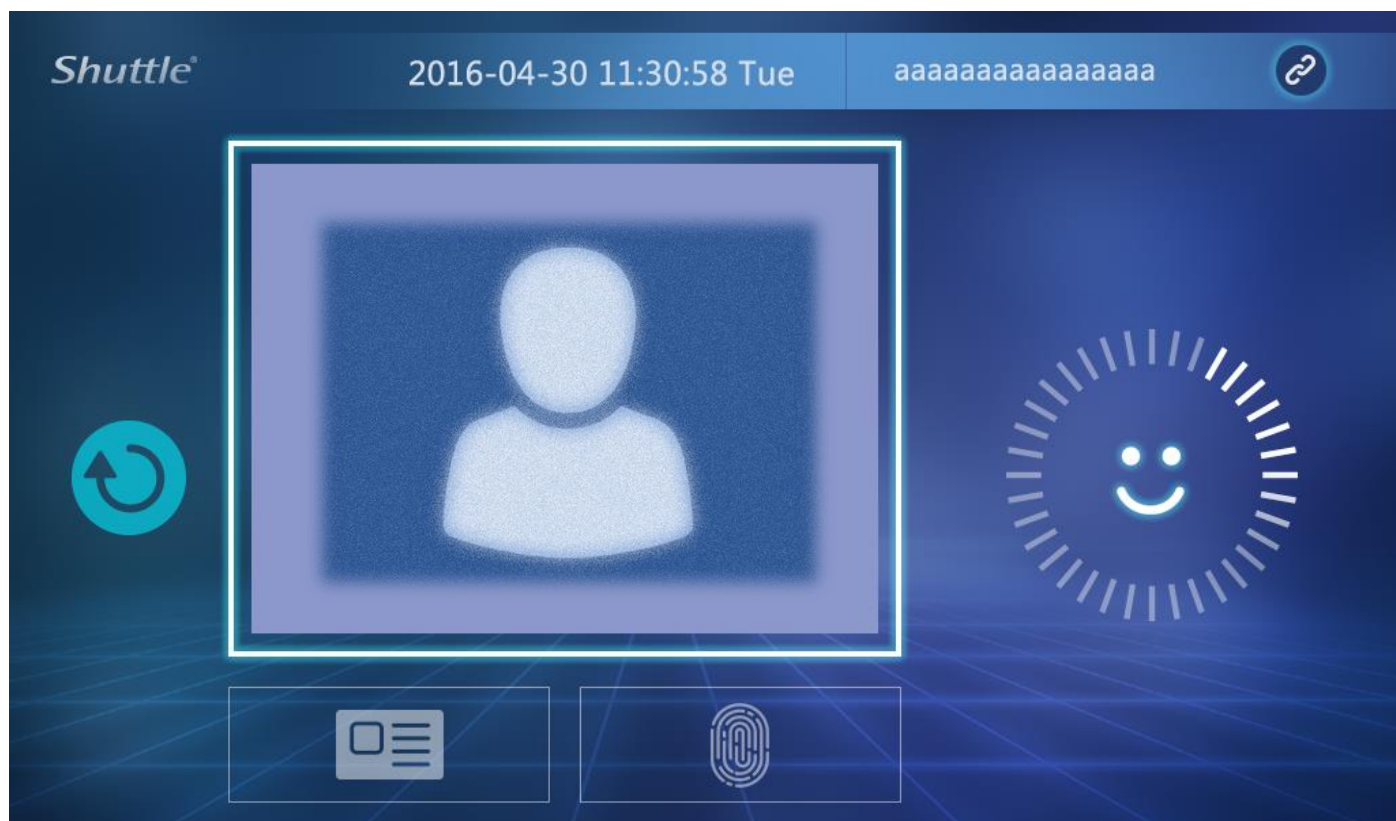

※Note

Press “Accept” button in “Device list” in the BR06 web page.

The screenshot shows the SHUTTLE/BR06 web interface. The left sidebar contains a menu with items: System, Device List, FR User List, FR User Group, Log, and Log Out. The main content area is titled 'Device List' and includes a 'Create new device' button. Below this is a table with columns: MAC-Address, IP, and Device Name. The table contains two rows of data. At the bottom of the page, there is a table with columns: Status, Sync time, and two empty columns. The first row of this bottom table shows a status icon, the sync time '2016-10-27 13:20:16', and two buttons: 'Accept' and 'Reject'. A blue arrow points from the 'Device List' menu item in the sidebar to the 'Accept' button in the bottom table.

MAC-Address	IP	Device Name
	192.168.xxx.xxx	Default192.168.100.85
701A xxxxxxxx	192.168.xxx.xxx	Meeting Room

Status	Sync time		
	2016-10-27 13:20:16	Accept	Reject

※Setting BR06 link Group by Server

The new BR06 device connection to server, and server device list item type **Accept** button, then follow below steps to add the group.

Path>>

Device list item > the device > **Edit** > **FR User Group List** > select **Default** group to Add.

Or you can create your setting groups to control personnel management.

Path>>

FR User Group item > **Create new group** > key group name > **Save** or Add another.